



# Triple-the-Fun Art Studio


## INSTRUCTION MANUAL

NO. 5082-04  
Ages: 3+



- Adult assembly required. No tools required.
- This item must be used on level ground. DO NOT use on an uneven surface.
- Adult supervision advised when item is in use.
- Maximum weight limit for each stool is 23 kg (50 lbs). Limit one (1) child.





PARTS LIST		
#	DESCRIPTION	QTY
A	Easel	1
B	Easel Leg (R)	1
C	Easel Leg (L)	1
D	Back panel	1
E	Storage Tray A	1
F	Storage Tray B	1
G	Stool Leg	4
H	Seat	1

### PARTS LIST

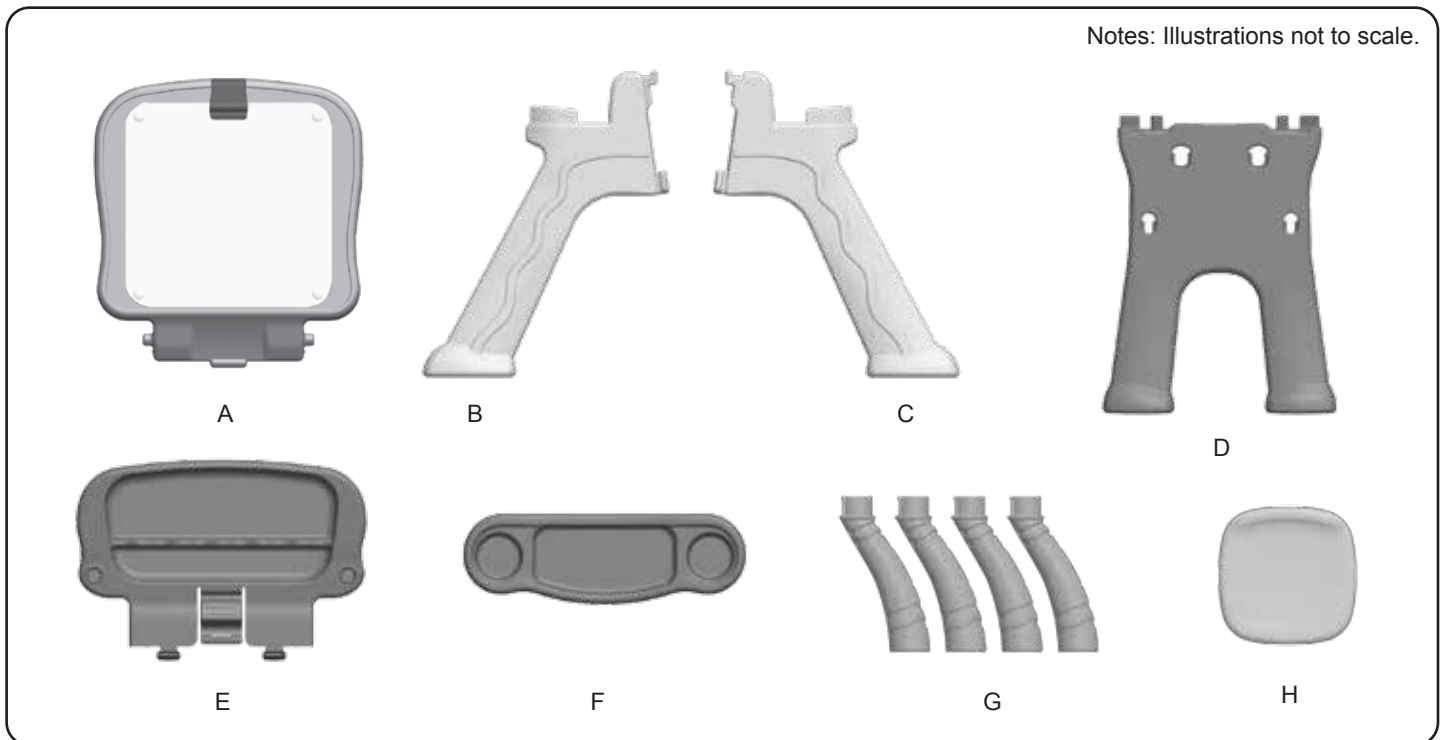


### ASSEMBLY INSTRUCTION

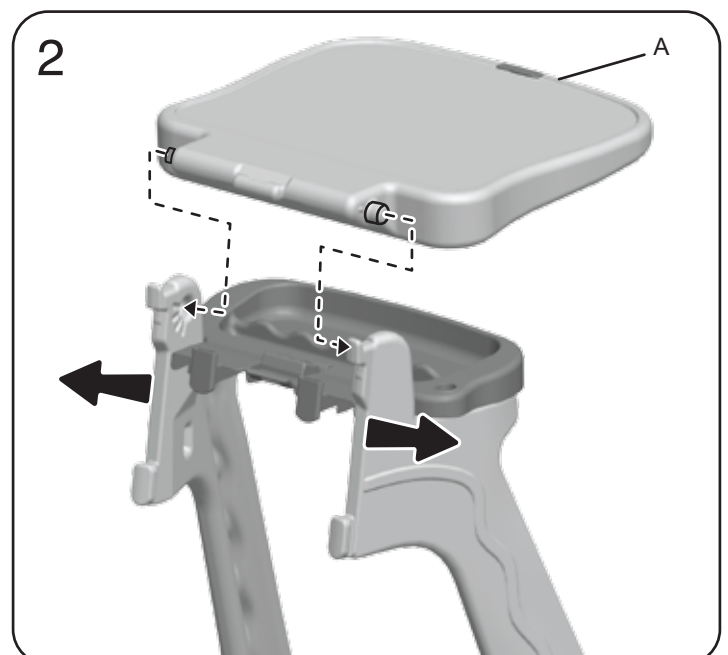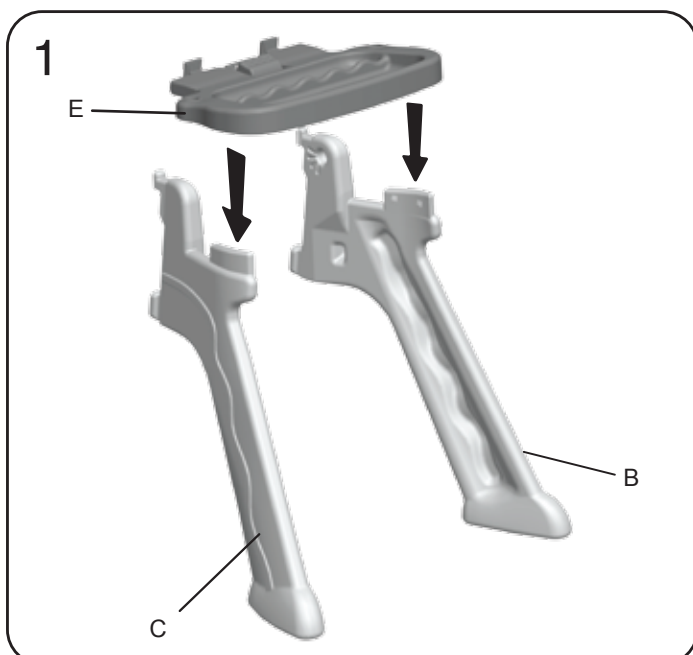

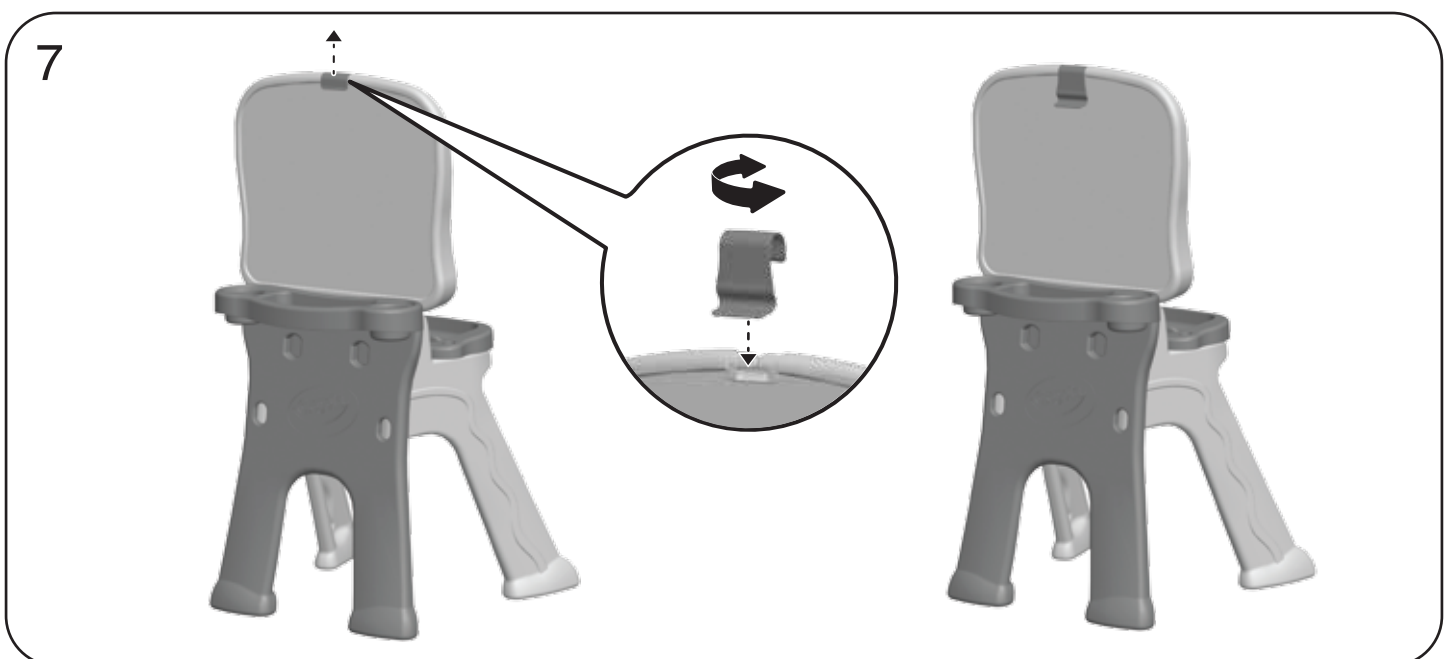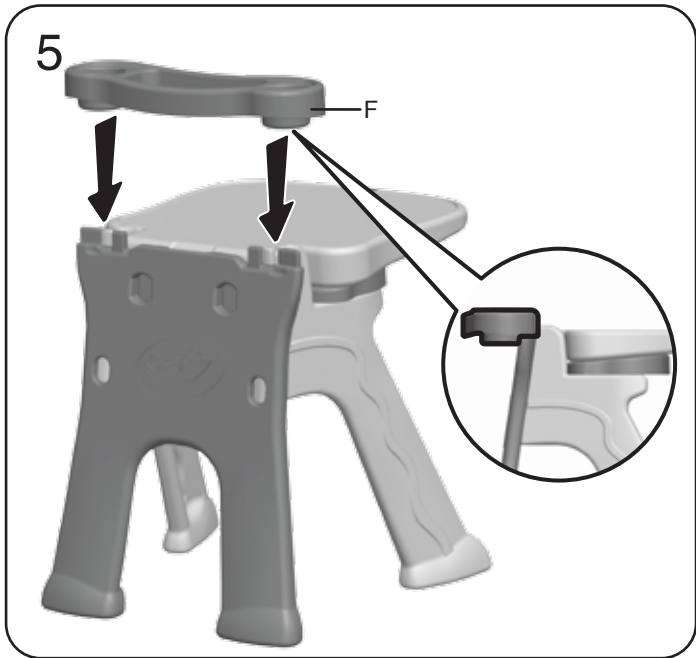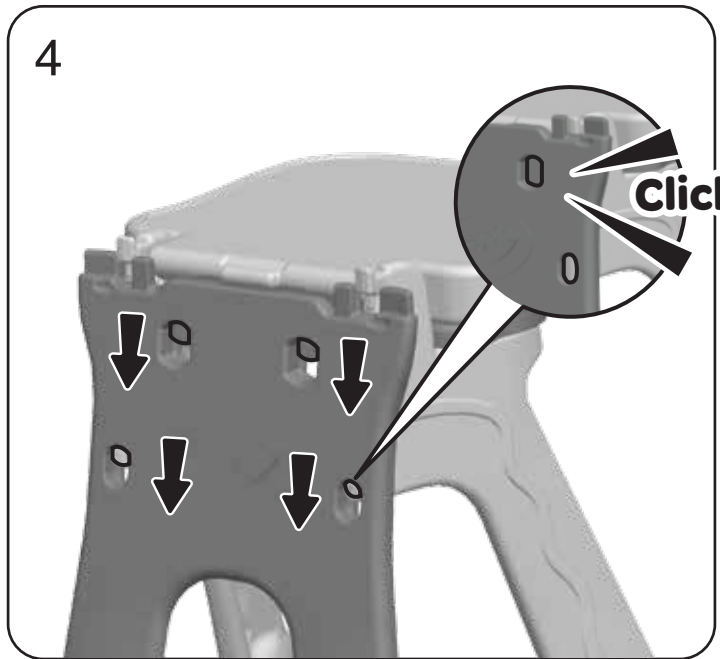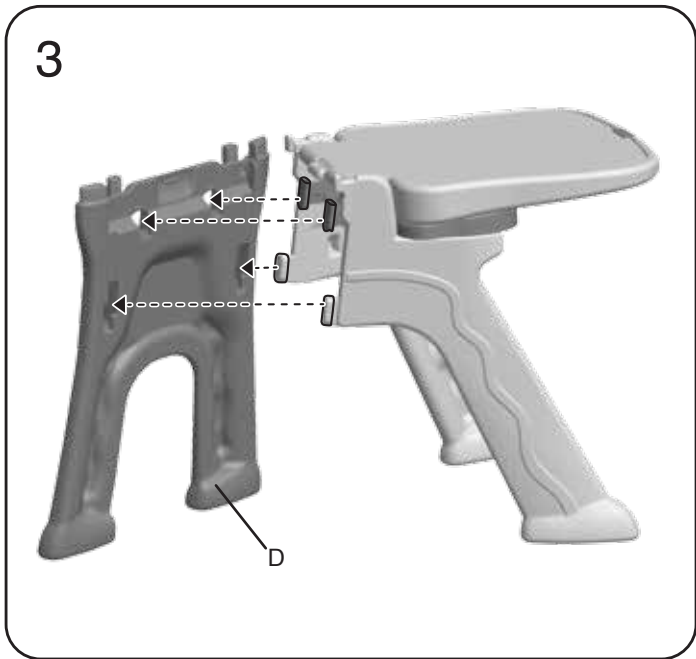


## STOOL

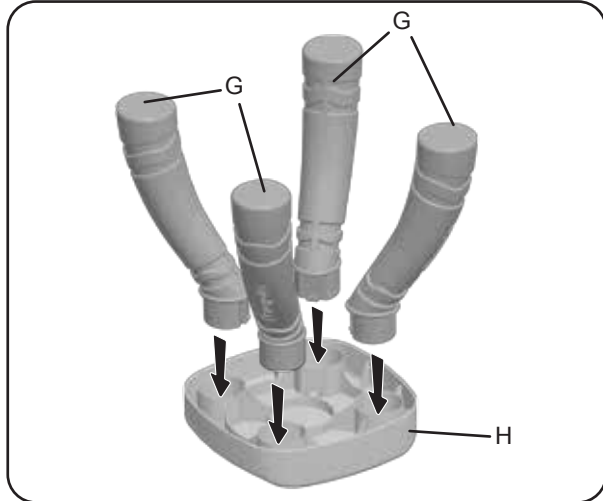

## EASEL MODE



## DESK MODE

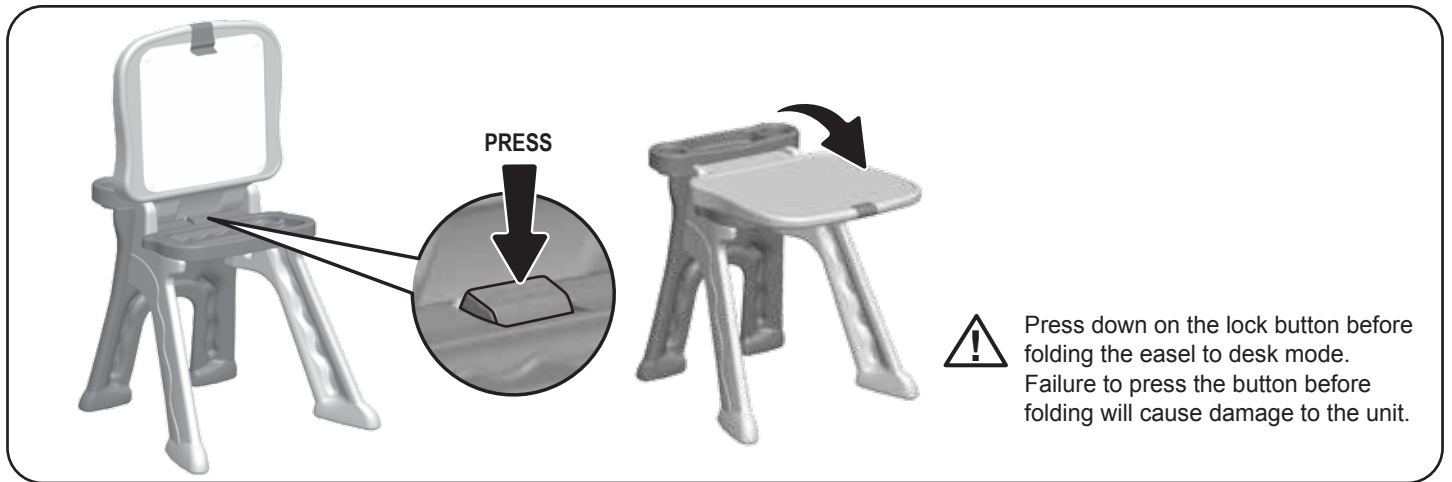

## SAFETY AND MAINTENANCE

- Before use, please check that all parts are assembled securely.
- Please carry out checks to the unit regularly for any worn out parts. If plastics are not assembled securely, minor or moderate injury may result. If stool and table legs are not snapped properly, the potential hazard of collapse or fall may result.

## CARE INSTRUCTION

- This table was made for INDOOR use. DO NOT attempt to use or expose the unit outdoors. The board is weather sensitive, any wetness or excessive dampness will ruin the board.
- DO NOT use any Spray or Dry-Erase cleaners on the board, as this may cause damage.
- Treat the board surface with care; DO NOT use sharp pointed objects on the drawing surface. Scratching the surface will cause permanent damage.
- Completely erase the board surfaces before storing easel for an extended period of time.
- Eraser can be used for dry-erase surface. If there is some hard-to-erase ink left on the board surface, use a slightly damp sponge (or paper towel) and wipe the board clean. Any excessive water may damage the board.

### Dry-Erase Whiteboard

- Completely erase the dry-erase surface before storing it for an extended period of time.
- It is recommended that you use Crayola® Dry-Erase Markers (purchase separately) on a small area of the board, prior to allowing the child to play with the board.
- Do not use Washable Markers or Permanent Markers. For best results, use only Crayola® Low Odor, Non Toxic Dry-Erase Markers and Washable Dry-Erase Markers.

## LIMITED WARRANTY

Our products are covered under warranty for a period of 60 days from the date of purchase, under normal use and service, against defective workmanship and material. If you have recently purchased this product and find it to be defective in anyway, kindly return it to the "Source of Purchase" for a Full Refund or Exchange.

Should the product no longer be covered by your Purchase Receipt, or should you have any questions pertaining to our product, please call our Toll Free Customer Service for assistance.

Keep a copy of the UPC Code with proof of purchase receipt for any future Warranty Service.

Please retain packaging and assembly instructions for future reference.

### CUSTOMER SERVICE

service@grow-n-up.com  
US/Canada Toll Free hotline: 1-888-468-9898  
www.grow-n-up.com

©2017 Crayola.  
Official Licensed Product  
Grow'n up Limited. All Rights Reserved.  
Room 808B New Mandarin Plaza, Tsim Sha Tsui, Kowloon, Hong Kong.  
**MADE IN CHINA (SZ)**